


FH28-35 环形防喷器配件包
Spare parts for FH28-35 Annular BOP
P/N:FH2835-00
FH2835/70-00
FH2835/70-00A
H30.00

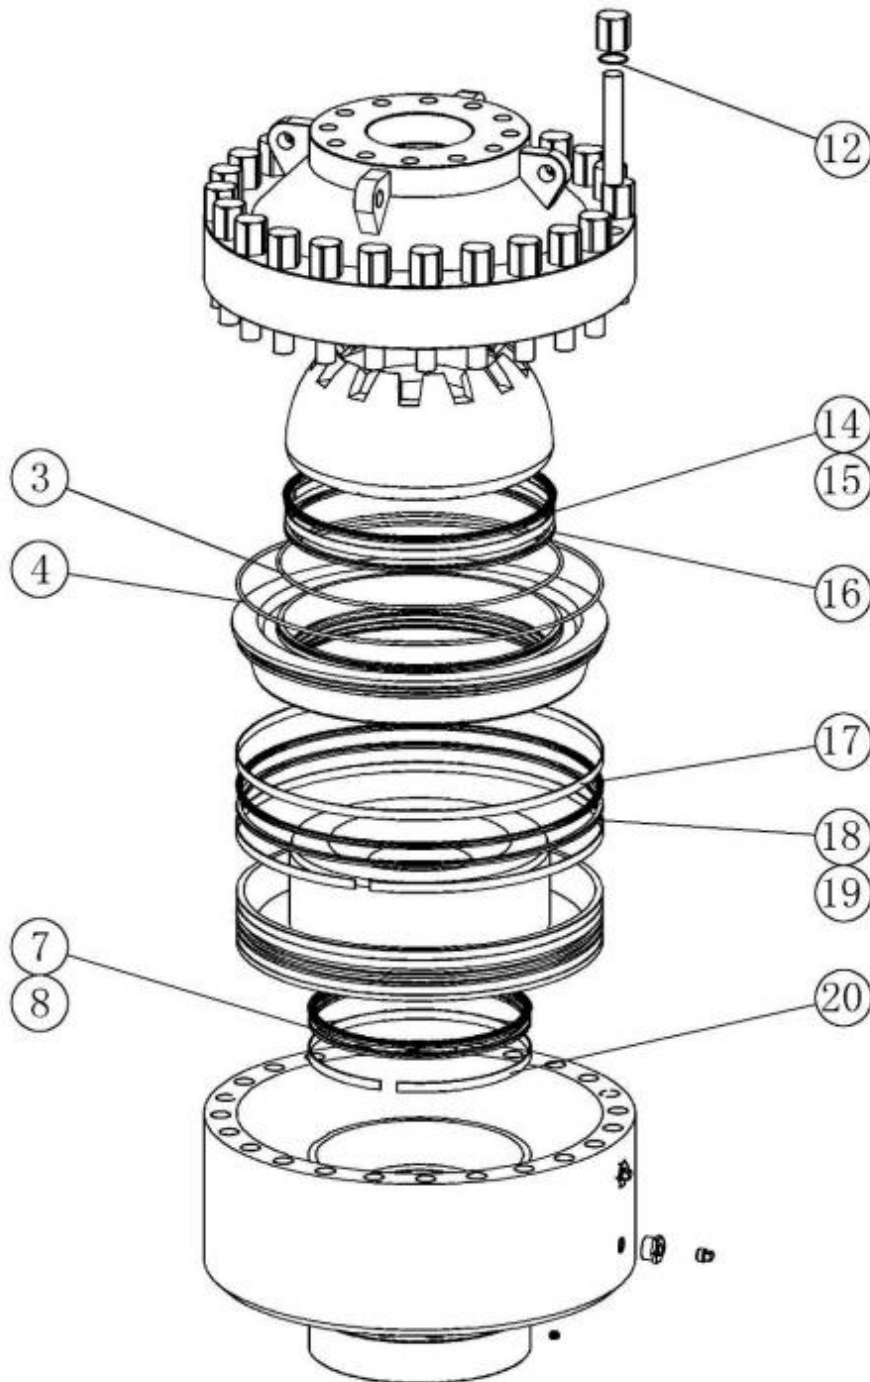

Schematic diagram of Repair kits for FH28-35 Annular BOP

序号 No.	说明书序号 No. in user Manual (No.1542)	名称 Description	零件号/型号 Part Number/Model	数量 Qty	安装位置 Location
1	3	挡泥环内密封圈(1) Seal-Adapter Ring I.D.(1)	FH2835-10	1	挡泥环 Adapter Ring
2	4	O形密封圈 O-ring, Adapter Ring O.D.	FH2835-12	1	
3	7	壳体密封圈 Seal-Shell	FH2835-18	2	壳体 Shell
4	8	O型密封条 O-ring	FH2835-19	2	
5	12	O形密封圈 O-ring	65×3.5 (ID×d)	24	盖形螺母 Cap nut
6	14	挡泥环内密封圈(2) Seal-Adapter Ring I.D.(2)	FH2835-15	2	挡泥环 Adapter Ring
7	15	O型密封条 O-ring	FH2835-16	2	
8	18	活塞外密封圈 Seal-Piston O.D.	FH2835-20	2	活塞 Piston
9	19	O型密封条 O-ring	FH2835-21	2	
10	16	挡泥环内耐磨环 Wear Ring- Adapter Ring	FH2835-27	1	
11	17	活塞外耐磨环 Wear Ring- Piston.	FH2835-17	2	
12	20	壳体耐磨环 Wear Ring- Shell.	FH2835-23	1	壳体 Shell